

GN 9120 ISDN Only

These are the items that are included in the GN 9120 Cordless Headset Kit. (except phone).

Power Supply

Short Phone Cord



**Charging Dock
& Base Plate**

Wearing Options

Headset

Handset Lifter



Administrative Information Only

Note: This system works with both 7506 and 7507 series phones.

GN 9120


Set the phone handset aside and remove the stickers on the back of the lifter so the sticky material is showing.

Press the lifter onto the phone as shown here.



Administrative Information Only

GN 9120

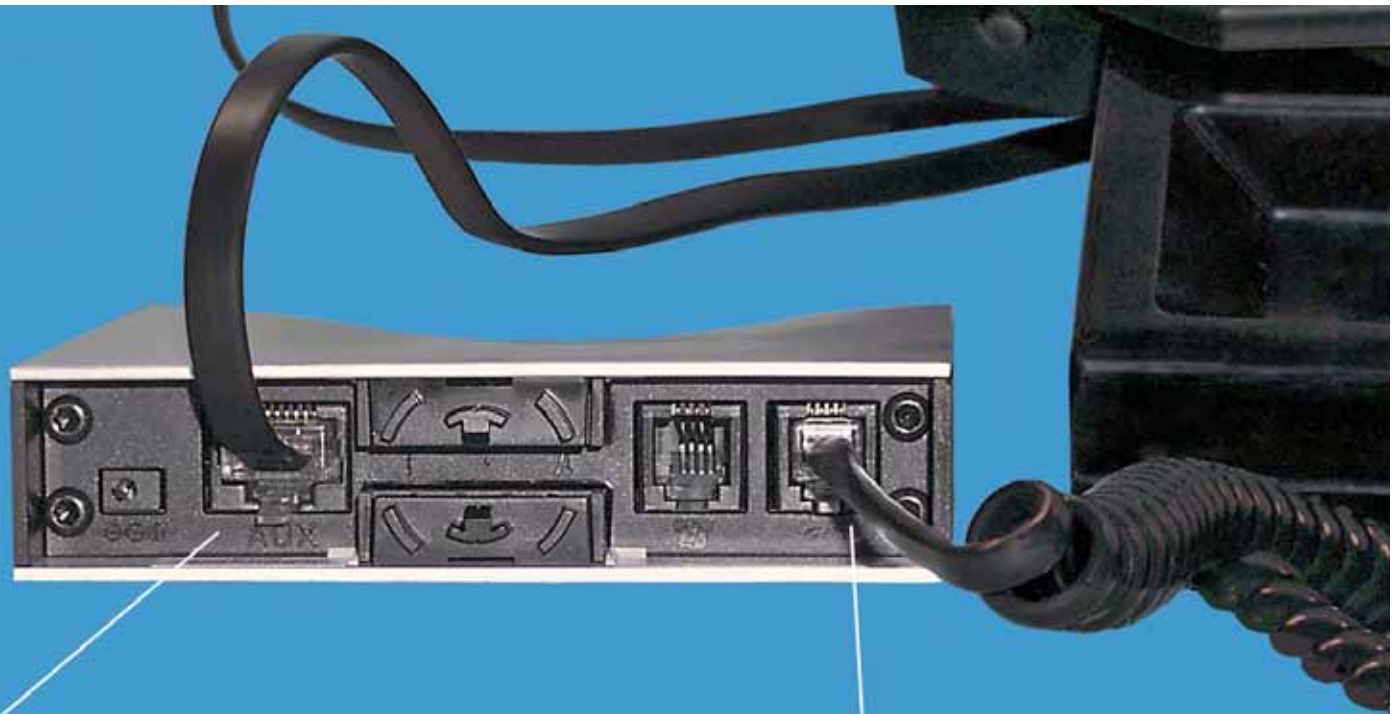

Connect the cord from the lifter to the bottom of the Charging Dock where it says "AUX".

Disconnect the coiled phone cord from the underside of the phone and connect it to the bottom of the Charging Dock where there is a picture of a handset.

Administrative Information Only

GN 9120


Connect the short phone cord to the handset plug on the phone and to the bottom of the Charging Dock where there is a picture of a phone.



Administrative Information Only

GN 9120

Attach the power supply into the Charging Dock and plug into the electrical socket.

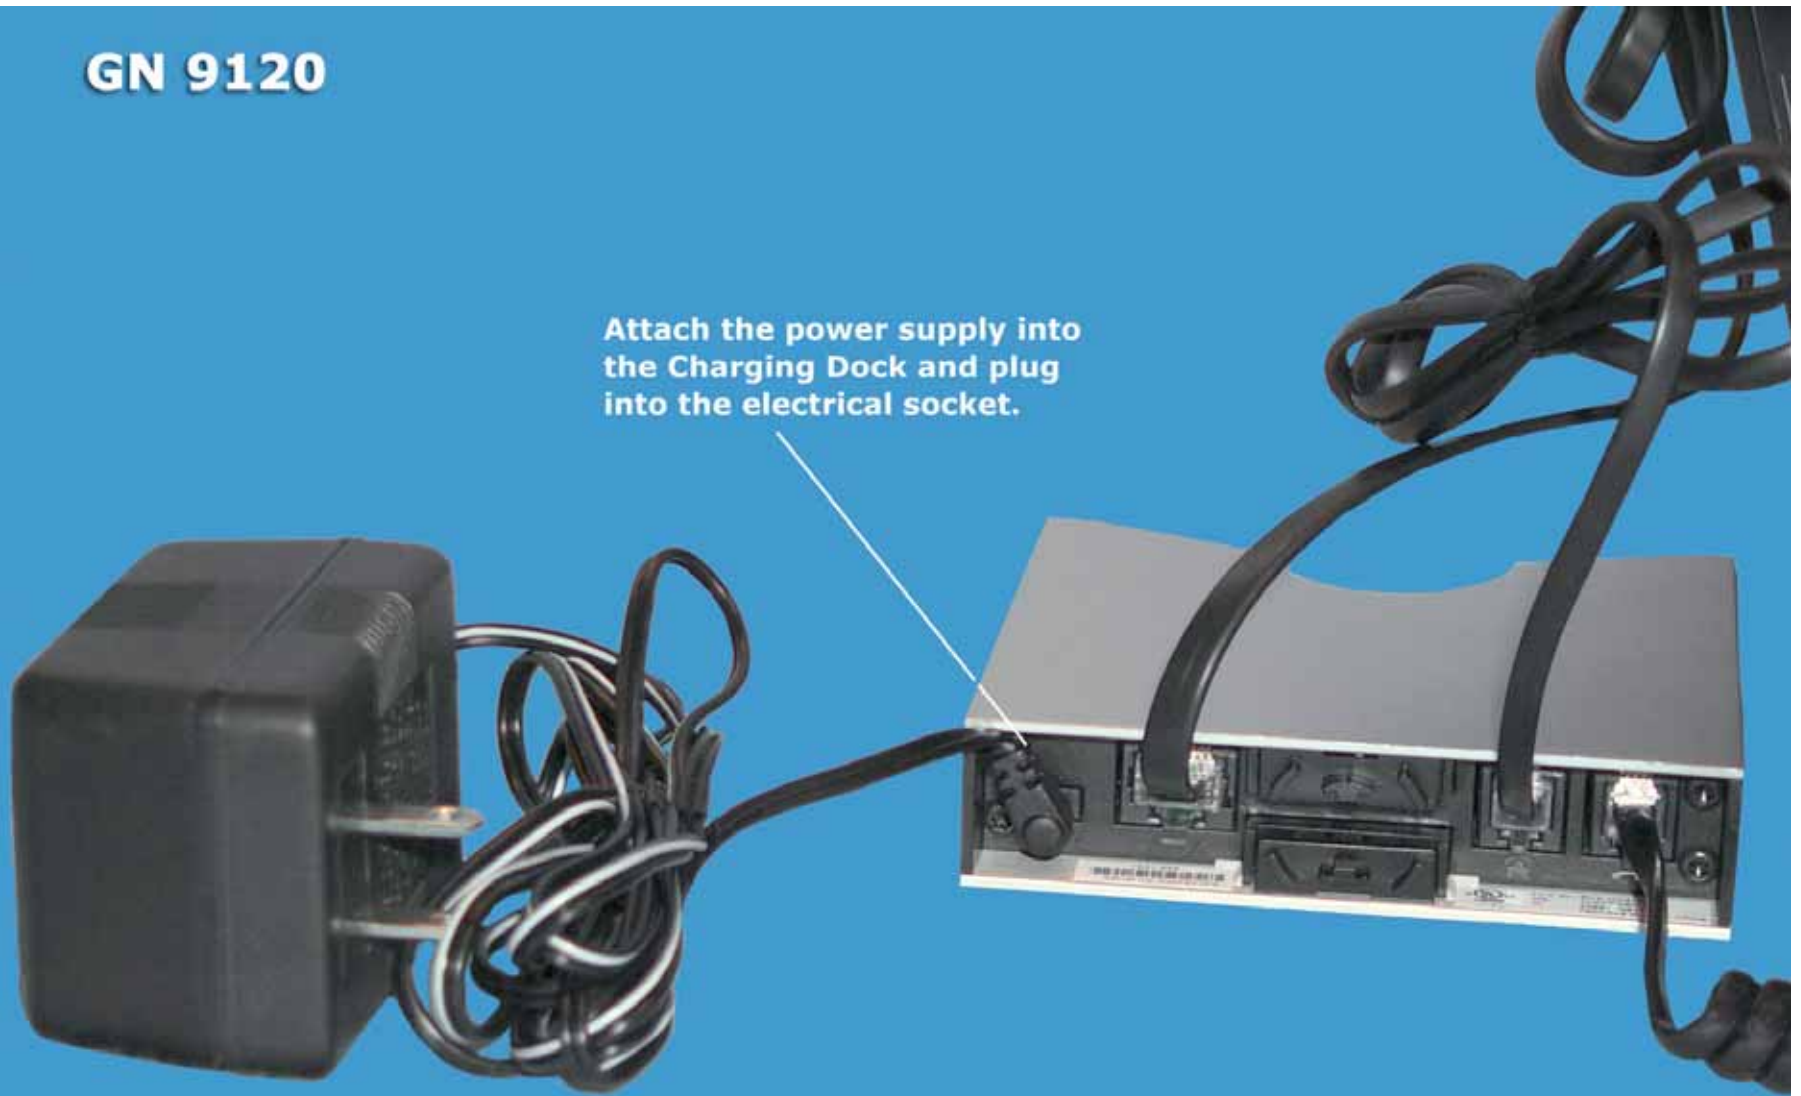

Administrative Information Only

GN 9120

Attach the Base Plate to the Charging Dock by matching the holes on the plate to the prongs on the Charging Dock and twisting the base to the right (clockwise).



Administrative Information Only

GN 9120



Choose a wearing style that will be comfortable and attach it to the headset by snapping the desired fitting onto the earpiece.

Remove by pushing gently on the speaker until the piece pops out.

Administrative Information Only

GN 9120

Connect the headset to the Charging Dock by setting the headset on the battery prongs as shown here.



Administrative Information Only

GN 9120




Replace the handset to its original location.

Let the headset charge initially for 1 1/2 hours.

Administrative Information Only


GN 9120

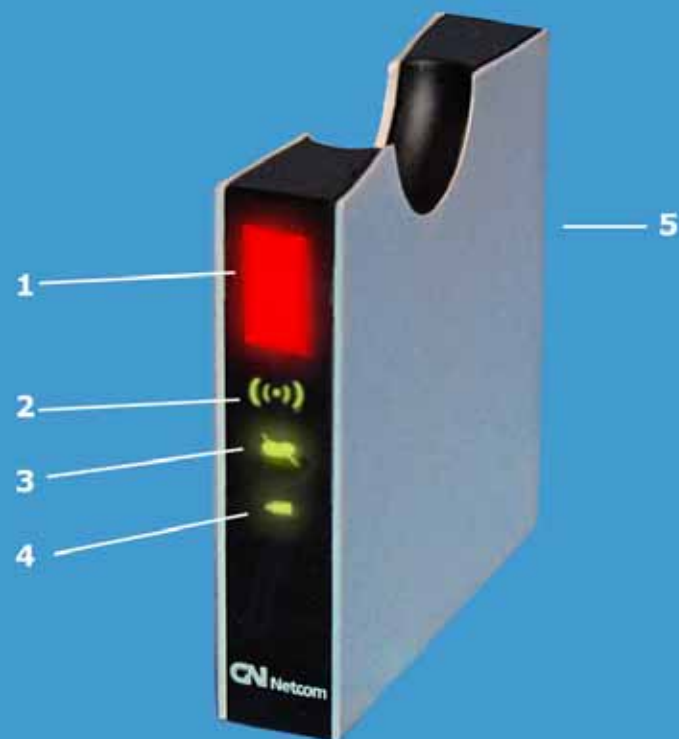

1. On-Line Indicator
2. Link-up Indicator
3. Mute Indicator
4. Battery Re-Charge Indicator
5. Telephone Termination Switch

Administrative Information Only

GN 9120

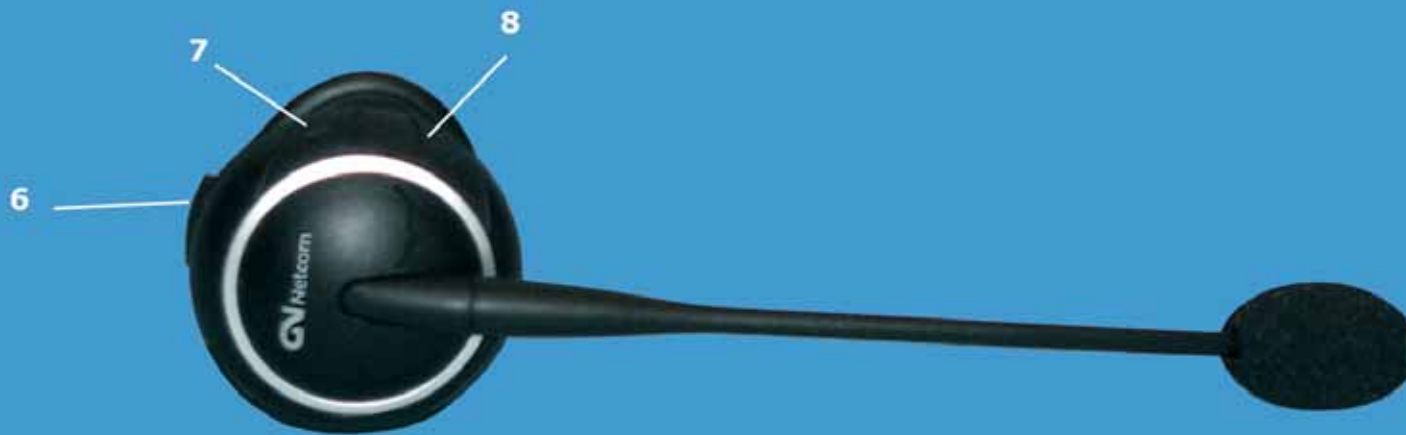

- 6. Volume Down Button
- 7. Multifunction Button
- 8. Volume Up Button

Administrative Information Only

Troubleshooting for GN 9120

1. I do not hear a dial tone

- Check that all the cords and plugs are connected correctly.
- Check that the power adapter is plugged in and has power.
- Check that the on-line indicator (1) is lit. If it is not, place the headset in the base unit and take it out again.
- Check that the battery is fully charged. If the battery is fully charged, the battery charging indicator on the Charging Dock will light when the headset is placed correctly on the battery prongs.

2. I hear beeps in my headset

- A beep every 15 seconds means that the mute function is on.
- A beep every 10 seconds means that you are out of range of the Charging Dock. Move closer to the unit.
- A beep every 20 seconds means that the battery charge is low and needs to be recharged.

3. The person I am talking to has difficulties hearing me

- Check that the mute function is off.
- Check the position of the boom and make sure that the microphone is placed as close as possible to your mouth.
- You may be out of range of the Charging Dock. Move closer to the unit.
- Static electricity may occur if Charging Base is placed too close to your telephone or other electronic devices.
- Adjust the transmit volume by pressing on both the - and + buttons on the headset for two seconds. There will be a beep. Using the volume up and down buttons, adjust the transmit volume.